

## University IT Networking & Communications MH150 / 160 Maintenance Tips

---

### Cleaning tips

Use the following cleaning tips to maintain your Wireless Telephone and Desktop Charger.

- Turn off the Wireless Telephone and unplug the Desktop Charger before you clean them. Please observe the following guidelines:
  - Never immerse either in water.
  - Clean the exterior surfaces, including the charging contacts, with a cloth that has been slightly moistened with water.
  - Do not exert undue pressure on the Desktop Charger electrical contacts while wiping.
  - Wiping the handset surface with a water-dampened cloth or paper towel will remove most films or residues.
    - If the soiling is too stubborn for plain water, a mild detergent solution may be used.
    - Wipe away any detergent residue with a clean water-dampened cloth.
  - The Wireless Telephone may be cleaned with any general-purpose household glass and surface-type cleaner.
    - Isopropyl alcohol may be used occasionally, applied by a cloth or paper towel.
    - When using alcohol, do not rub the keypad characters vigorously. Doing so will significantly degrade legibility.



#### *DO NOT SPRAY THE HANDSET DIRECTLY!*

- Pre-treated cloths such as used for eyeglasses or cameras may be used to clean the phone. Pre-moistened towelettes may also be used to clean the phone, however, avoid those containing lanolin or aloe as it will leave a slippery residue.
- The surface of the handset may be cleaned occasionally with disinfectants used for general cleaning in a medical environment.
  - Isopropyl alcohol may be used occasionally, applied by a damp cloth or paper towel. When using alcohol, do not rub the keypad characters vigorously. Doing so will significantly degrade legibility.
  - Do not use furniture polishes, waxes or plasticizer-based cleaner (Armor All®, etc.)
  - Do not use lanolin, aloe, glycerin or other skin care type products.
  - Do not apply any solvent such as acetone, mineral spirits etc.
  - Do not directly spray or immerse the handset.
- If the headset connector becomes dirty, a scratchy or intermittent signal may be experienced. To clean the connector, dip the non-padded end of either a wooden or paper handled cotton swab in isopropyl alcohol. Gently insert in the connector and twist, repeating several times. If available, blow compressed air into the connector to clear debris.